 


VISIONCHART

ASSEMBLY

GUIDE

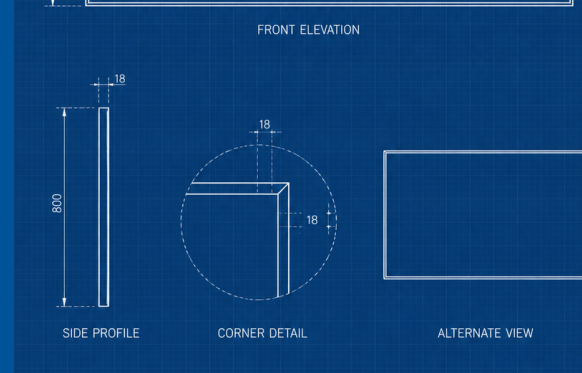

LX8 Edge Frame Writing Board

Overview

These instructions show you how to mount an EDGE FRAME to a wall using the install baton (top rail), then fit the pen tray and the two safety brackets (bottom locks).

Before You Start

- Decide whether the frame will be mounted portrait (tall) or landscape (wide). Use the matching install baton.
- Confirm your wall type:
 - Brick/Cement (masonry)
 - Gyprock/Plaster (plasterboard)
- If you're mounting to plasterboard, make sure you use proper wall anchors rated for the load (or fix into studs if available).
- Plan the mounting height so the pen tray is comfortable to reach.

Tools You'll Need

- Spirit level
- Measuring tape
- Pencil
- Drill/driver
- Drill bits to suit your wall type (masonry bit for brick/cement; suitable bit for plasterboard anchors)
- Safety glasses

Parts Included

- Install baton for portrait mounting (x1)
- Install baton for landscape mounting (x1)
- Pen tray (x1)
- Safety brackets (x2)
- Screws: 40 mm (x5), 35 mm (x5), 30 mm (x5), 15 mm (x2)

What to Check

- The wall is flat and solid (no loose render, crumbling mortar, or soft plaster).
- You have enough clearance to lift the frame up and lower it onto the baton.
- You can drill safely (no hidden services where you're drilling).
- You can keep the install baton perfectly level (this determines whether the frame sits straight).

Safety Notes

- Lift with two people if the frame is large/heavy.
- Wear eye protection when drilling.
- Don't overtighten screws into plasterboard anchors (you can strip them).

Step-by-Step Instructions

1. Select the correct install baton.

- Use the portrait baton for a tall orientation, or the landscape baton for a wide orientation.
- **Check:** The baton matches the way you want the frame to sit.

2. Hold the install baton against the wall at your chosen height.

- Position it where the top of the frame needs to hang.
- **Check:** You can comfortably reach the baton and drill points.

3. Level the install baton.

- Place a spirit level on the baton and adjust until level.
- **Check:** The level bubble is centred.

4. Mark all baton fixing holes.

- Keep the baton in place and mark each hole location with a pencil.
- **Check:** Marks are clear and evenly spaced along the baton.

5. Drill the marked holes.

- Brick/Cement: drill with a masonry bit to suit your wall plugs.
- Gyprock/Plaster: drill to suit your chosen plasterboard anchors.
- **Warning:** Drill straight; don't angle the holes.
- **Check:** Each hole lines up with the baton holes.

6. Install wall fixings (if required).

- Brick/Cement: insert wall plugs fully into the holes.
- Gyprock/Plaster: install plasterboard anchors according to the anchor instructions.
- **Check:** Fixings sit flush and feel secure.

7. **Screw the install baton to the wall.**

- Drive screws through the baton into the wall fixings.
- Tighten until snug; do not overtighten.
- **Check:** The baton does not rock or flex, and it is still level.

8. **Hang the frame on the install baton.**

- With two people if needed, lift the frame up to the baton.
- Hook the top of the frame over the baton and lower it until it seats fully.
- **Check:** The frame is sitting flush and supported along the top; it shouldn't wobble.

9. **Fit the pen tray.**

- Slide the pen tray into the bottom channel of the frame until fully seated.
- **Check:** The tray sits straight and doesn't slide out easily.

10. **Position the two safety brackets.**

- Place one bracket near each lower corner on the back/bottom area (as designed to stop the frame lifting off the baton).
- Orient each bracket so it can be fixed to the wall and also capture/lock the lower edge of the frame.
- **Check:** Both brackets sit flat and are symmetrical left/right.

11. **Mark the bracket fixing points.**

- With the frame in its final position, mark the wall through the bracket holes.
- Use the specified 28.4 mm bracket measurement where applicable (follow the bracket's built-in offset/spacing as intended).
- **Check:** Both brackets will pull the bottom edge in evenly.

12. **Drill and install fixings for the brackets.**

- Drill the marked holes and install plugs/anchors to suit the wall type (as in Steps 5–6).
- **Warning:** Keep the frame stable while drilling/marking so it can't slip.
- **Check:** Fixings are secure and aligned with the bracket holes.

13. **Secure the safety brackets.**

- Screw each bracket into the wall fixings. Tighten until snug.
- Install the small screws (15 mm) where required to lock the bracket to the frame.
- **Check:** You cannot lift the bottom of the frame away from the wall.

Finishing Checks

- Frame is level and sits flat against the wall.
- Install baton is firmly fixed (no movement).
- Safety brackets are fitted and tight, preventing lift-off.
- Pen tray is fully seated and straight.

Troubleshooting

Frame isn't level

- The install baton is not level. Loosen the baton screws slightly, re-level, then retighten.

Baton feels loose

- Incorrect wall fixings or over-drilled holes. Replace with correct plugs/anchors for your wall type.

Frame won't seat on the baton

- The frame may not be lifted high enough before lowering onto the baton, or the baton orientation may be wrong. Remove the frame and re-seat carefully.


Pen tray won't slide in

- Check it's aligned with the bottom channel and that brackets aren't blocking the channel area.

Bottom can still lift away

- Brackets may be reversed, not tight, or the small locking screws are missing.


Sydney Head Office	Brisbane Warehouse	Melbourne Warehouse	Perth Warehouse	NZ Warehouse	Shanghai Warehouse
Huntingwood NSW 2148	Brendale QLD 4500	Campbellfield VIC 3061	Perth Airport WA 6105	Papatoetoe New Zealand 2025	Waigaoqiao Pudong PRC
Office: (02) 9725 3177			Free Call: 1800 067 278		
<u>www.visionchart.com.au</u>		<u>orders@visionchart.com.au</u>		<u>service@visionchart.com.au</u>	

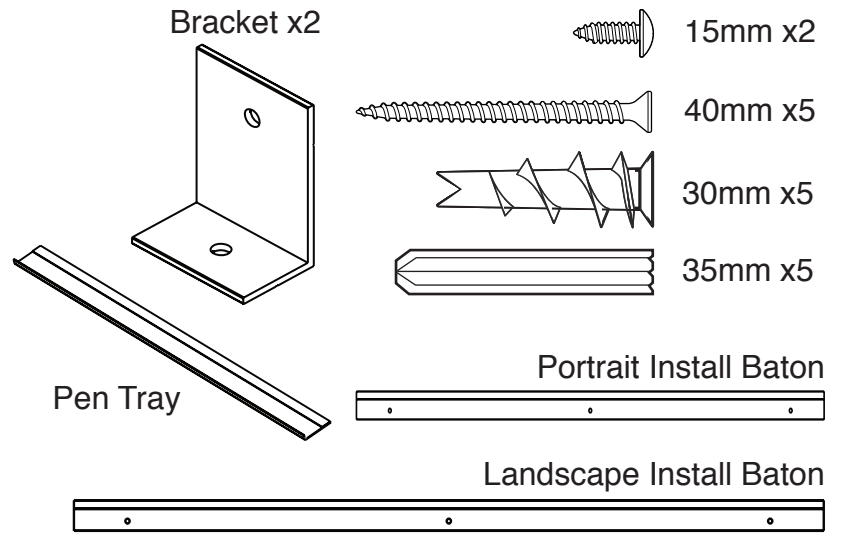


Installation Instructions

- EDGE FRAME
- LX7000 & LX8000

 
1

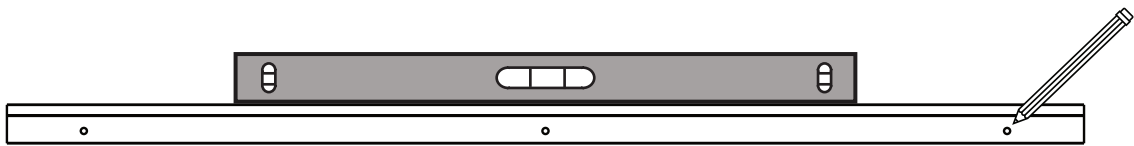


2

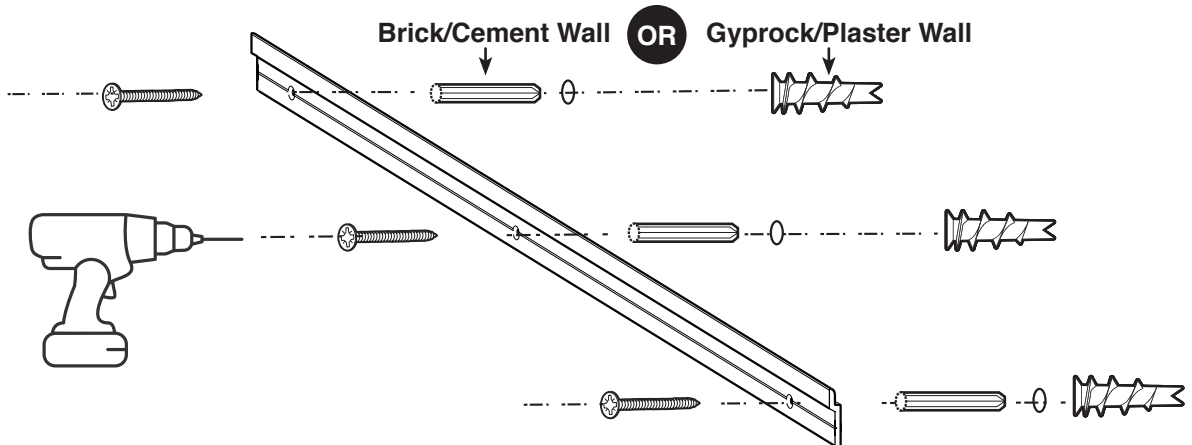 


3

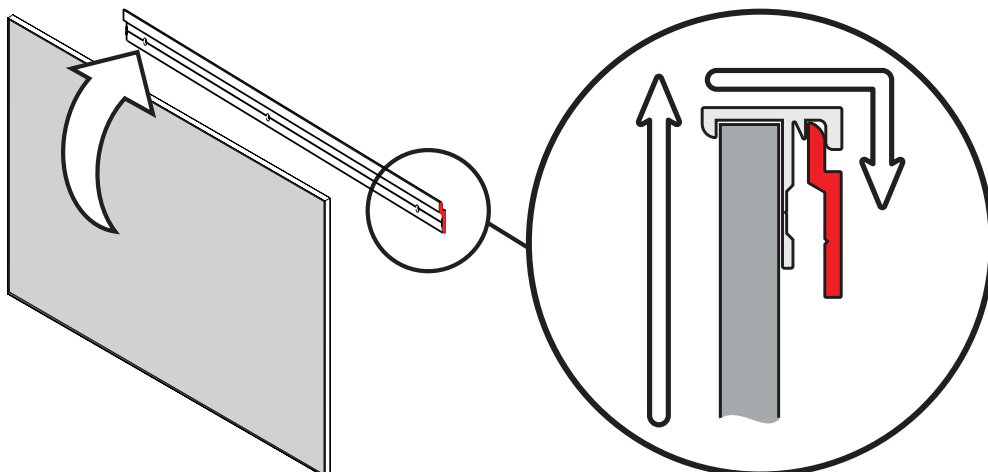 


4

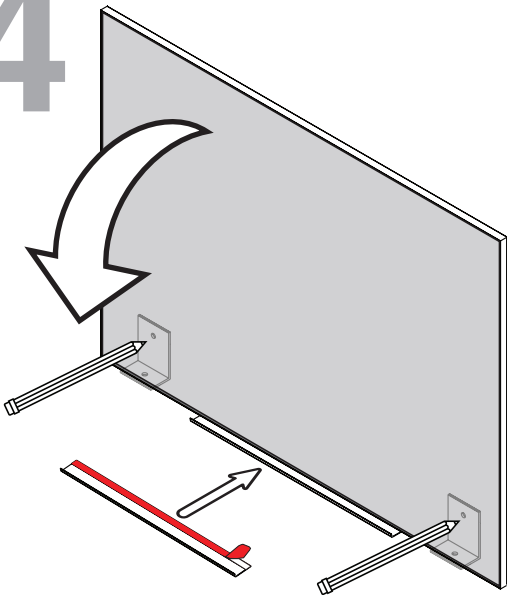 

5

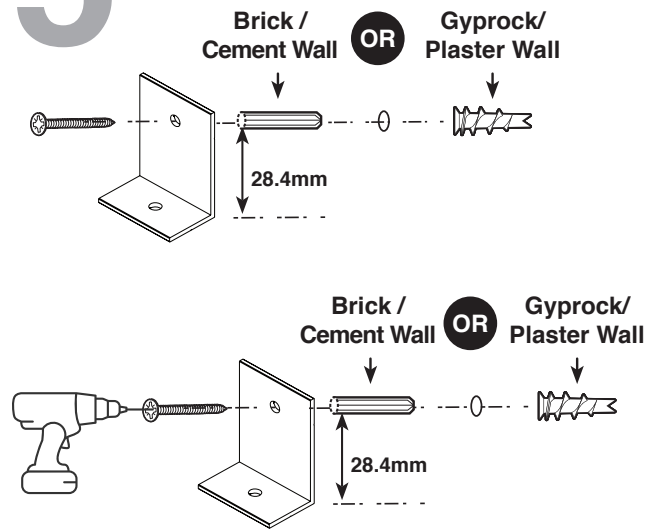 

6

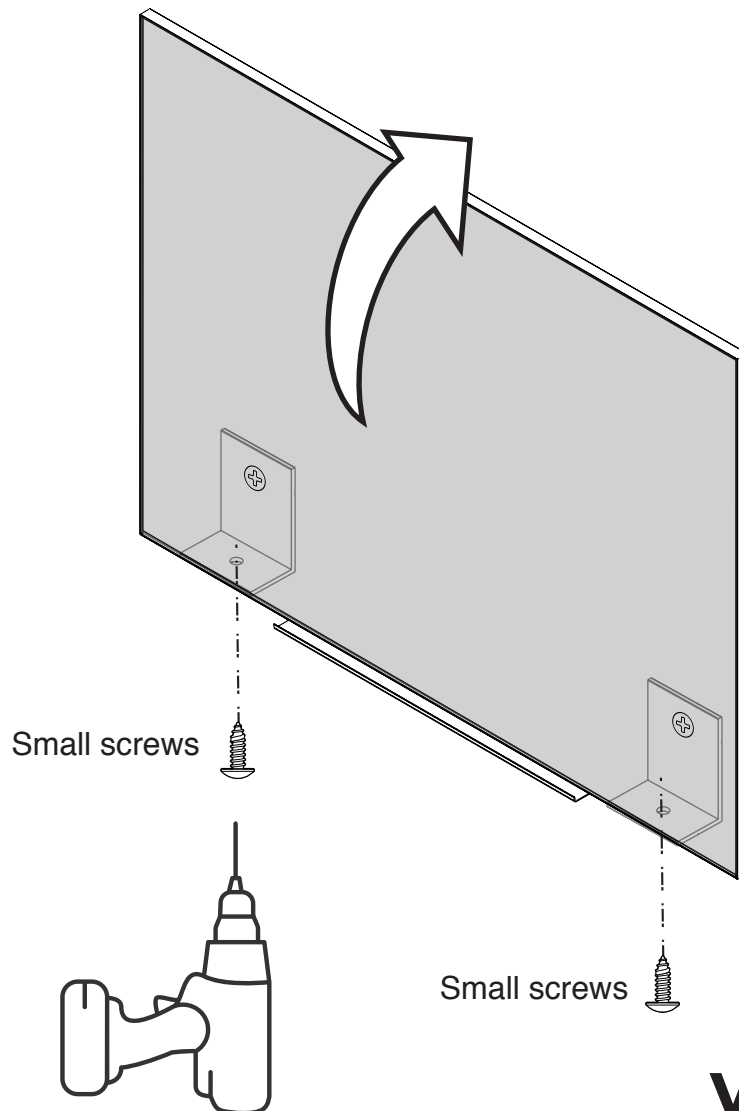 

VISIONCHART