


722495B UTILITY CART

ASSEMBLY INSTRUCTIONS

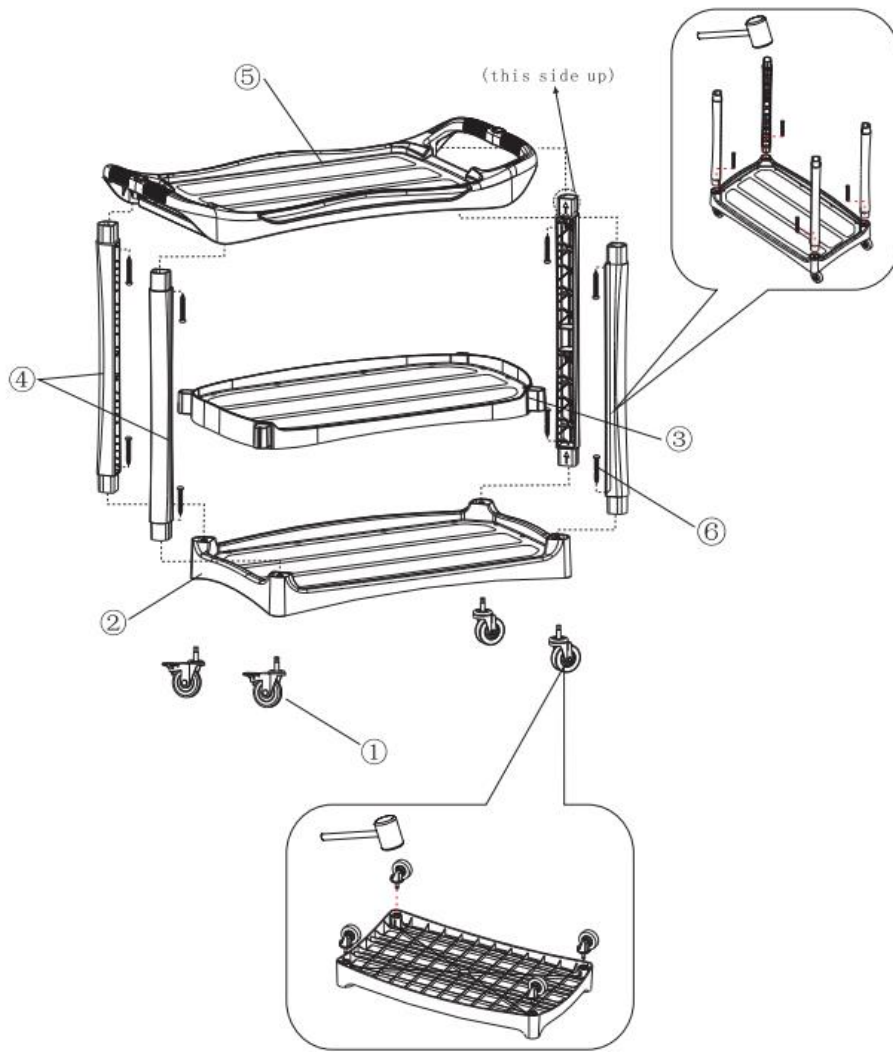

Step 1: Install the Wheels:

Place the base tray (2) with the raised sides facing down on a flat work surface. Holding each wheel (1) so that it does not swivel, hammer into the moulded housings on the base tray using a rubber mallet. NOTE: A metal hammer is not recommended for fitting the wheels as it can more easily slip and cause an injury, or it may mark and damage the wheels. Only after the wheels are fully installed, turn over the base tray so that the raised sides are facing up and proceed to Step 2.

Video demonstration: <https://www.youtube.com/watch?v=RyWLO3PLHqw>

Step 2: Install the Pillars:

As pictured, with the arrows on the pillars (4) facing up and inwards, place into the notches on the topside of the base tray (2). Tap in gently using a rubber mallet if not fully seated.

Step 3: Install the Middle Tray:

With the raised sides of the middle tray (3) facing up, place the corners into the notches located at the middle of the pillars (4).

Step 4: Install the Top Tray:

With the raised sides and handles of the top tray (5) facing up, place on top of the pillars (4) so that the top of each pillar is aligned with the corresponding notch on the underside of the top tray.

Step 5: Secure the Top and Base Trays:

As pictured, use the 8x screws (6) supplied to secure the top tray to the pillars (4) from the underside of the top tray, and to secure the base tray (2) to the pillars (4) from the topside of the base tray.