


VISIONCHART ASSEMBLY GUIDE

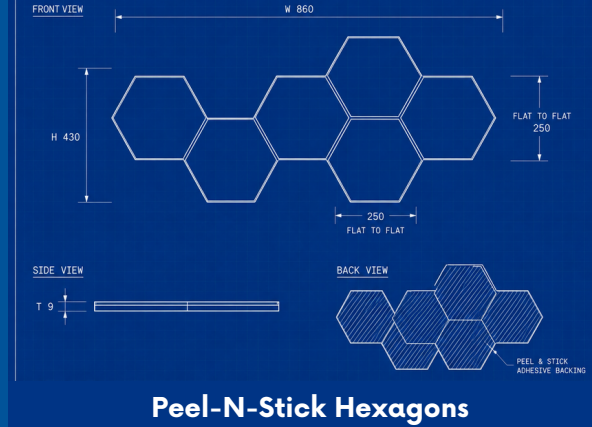

Overview

These instructions show you how to install one pack of 6 peel-and-stick SANA-HEX acoustic hexagons onto a wall, and how to clean them afterwards.

Before You Start

- Plan your layout first. **Once a tile touches the wall, it cannot be repositioned.**
- **Don't remove the backing film** until you are ready to stick each tile up.

Tools You'll Need

- Tape measure
- Pencil
- Spirit level
- Fine sandpaper or steel wool (only if needed)
- Clean cloth (dry) for wiping dust
- (Optional) Mild carpet shampoo + water and a sponge (for future spot cleaning)

Parts Included

- 6 × Peel 'n' Stick acoustic hexagons (300 × 260 mm each)

What to Check

- **Wall surface condition:** Must be clean, wiped down, and completely dry.
- **Paint type:** Some paints have additives that reduce bonding. If tiles don't seem likely to stick well, lightly sand first.
- **Dust and moisture:** After removing the release film, keep the adhesive side away from dust and moisture.

Safety Notes

- If sanding, avoid breathing dust. Work in a ventilated area and wipe up dust fully before sticking tiles.
- When removing stains with a tool edge, do not cut into the panel.

Step-by-Step Instructions

1. Check the wall is clean and dry.

- Wipe the surface and ensure there's no dust or moisture.
- **Check:** The wall feels dry and has no chalky residue on your fingers.

2. Lightly sand if needed (only if your paint is "slippery" or hard to bond to).

- Use fine sandpaper or steel wool to lightly scuff the area, then wipe away all dust.
- **Check:** The surface feels slightly more matte, and no sanding dust remains.

3. Measure and mark your coverage area.

- Use a tape measure and pencil to mark the boundary of where the tiles will go.
- **Check:** Your marks match the area you want to cover.

4. Use a spirit level to square up your guide lines.

- Draw light horizontal/vertical lines so the pattern stays straight.
- **Check:** Your guide lines are level (horizontal) and plumb (vertical).

5. Dry-position the tiles (without removing the backing).

- Hold tiles up to confirm spacing, pattern, and where the first tile will sit.
- **Check:** You know exactly where tile #1 goes and how the others will follow.

6. Peel the protective 3M backing from the first tile.

- Only do this immediately before sticking it up. Keep the adhesive side clean and dry.
- **Warning:** Once stuck to the wall, the tile cannot be repositioned.

7. Stick the first tile onto the wall.

- Align it to your pencil lines, then press firmly.
- **Check:** All edges are aligned to your guides before you press fully.

8. Press and hold the tile in place for 20–30 seconds.

- Apply firm, even pressure across the tile.
- **Check:** The tile feels evenly bonded with no loose corners.

9. Repeat steps 6–8 for the remaining 5 tiles.

- Work one tile at a time: peel, position carefully, press and hold.
- **Check:** The pattern remains straight as you go (re-check against your level lines).

10. **Leave the tiles undisturbed for 8 hours.**

- This allows maximum adhesion.
- **Check:** No one touches or knocks the tiles during this time.

Finishing Checks

- All 6 tiles are straight and aligned to your guide lines.
- No corners are lifting.
- The tiles have been left for 8 hours before any contact/cleaning.

Troubleshooting

Tile looks crooked after sticking

Unfortunately it can't be repositioned once adhered. Plan carefully and use guide lines before sticking the next tile.

Tile doesn't seem to bond well

The wall may have paint additives or dust. For future installs, lightly sand the area with fine sandpaper/steel wool, then wipe completely clean and dry.

Corners lifting shortly after install

Press and hold again firmly for 20–30 seconds. Make sure the surface was fully clean and dry.

Care & Maintenance

- Light vacuuming regularly to prevent dust build-up.
- Blot spills quickly with a slightly damp cloth.
- Avoid severe abrasion (scrubbing hard).
- Protect from direct heat and sunlight.
- Spot clean only. Before using any cleaner, test on a hidden area to ensure it doesn't affect the panel or adhesive.

Stain cleaning guide (spot clean)

Grass, paint, chocolate, crayon, grease, mud, sauces, shoe polish:

- Gently lift solids with a knife/tool edge (don't cut into the panel).
- Sponge with carpet shampoo mixed with water, working from the outside of the stain toward the centre.
- Blot with a clean wet cloth after each application.

Blood, drinks, wine, ink, colour markers:

- Wipe up excess first.
- Then sponge with carpet shampoo + water (outside toward centre), and blot with a clean wet cloth after each application.

Chewing gum:

- Gently pick off with a knife/tool edge (don't cut into the panel).
- Freeze any residue with ice cubes, then scrape away.

Dirt:

- Vacuum excess first, then use the carpet shampoo + water method (outside toward centre), blotting with a clean wet cloth after each application.
- Burn/scorch mark:
- Use a circular cutter to remove the damaged section, then re-glue a new piece into the cut-out.

Technical Specs

- Quantity: 6 tiles
- Tile size: 300 × 260 mm each
- Adhesive backing: 3M peel-and-stick
- Press time: 20–30 seconds per tile
- Cure time to maximum adhesion: 8 hours

Sydney Head Office	Brisbane Warehouse	Melbourne Warehouse	Perth Warehouse	NZ Warehouse	Shanghai Warehouse
Huntingwood NSW 2148	Brendale QLD 4500	Campbellfield VIC 3061	Perth Airport WA 6105	Papatoetoe New Zealand 2025	Waigaoqiao Pudong PRC
Office: (02) 9725 3177			Free Call: 1800 067 278		
<u>www.visionchart.com.au</u>		<u>orders@visionchart.com.au</u>		<u>service@visionchart.com.au</u>	

Hexagon Installation Instructions

6x Peel 'n' Stick Acoustic Hexagons (300x260mm ea.)

1. Wall/Substrate Preparation

Some paints contain additives that make a permanent bond difficult to achieve. If this is the case, lightly sanding the wall with a fine sand

paper or steel-wool can help improve permanent adhesion. Ensure the surface is wiped down, completely dry and any residual dust is removed.

2. Pattern/Layout

Do not remove the release film on the Hexagons until immediately prior to installation. Once the film has been removed, the tile must not be exposed to any moisture or dust. Measure and mark the area to be covered with Hexagon Tiles on the wall. If needed, use a spirit level to ensure your lines are horizontally and vertically straight.





3. Peel and Stick!

Once tiles are stuck to wall they can not be repositioned

Peel off protective 3M backing, press and hold on the wall in position for 20-30 seconds.

Repeat for other 5x Hexagons.
Leave for 8 hours to achieve maximum adhesion.

Create a modular designs...

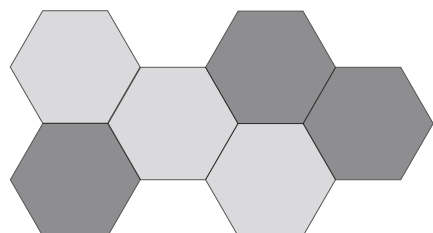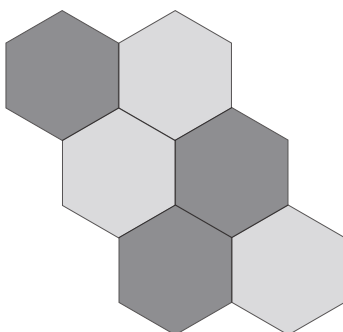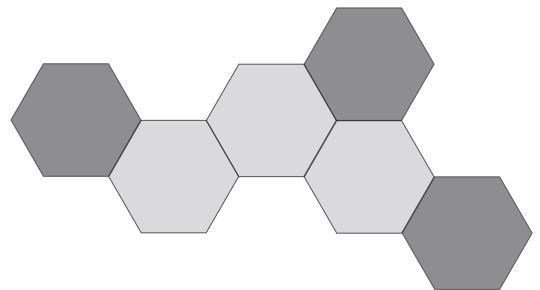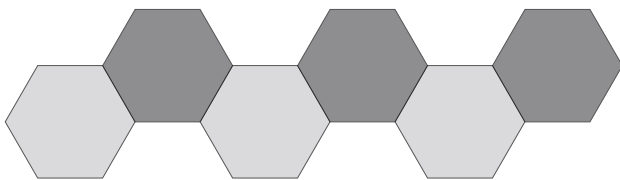

CLEANING & MAINTENANCE

SANA is a durable acoustic product that requires little attention to maintain it's quality.

Light vaccuming on a regular basis prevents dust build up. Blot excess spills from material as quickly as possible by wiping with a slightly damp cloth. Avoid severe abrasion. Protect from direct heat and sunlight. Spot clean only.

The cleaning guide below should be taken as general advice to assist with specific stains. Before carrying out an advised cleaning method, test on a concealed section to ensure it will not affect the adhesive or product.

Stain Types	Cleaning Recommendation
Grass, Paint, Chocolate, Crayon, Grease, Mud, Sauces, Shoe Polish,	Pick off with knife/tool edge. Do not cut into panel. Sponge with carpet shampoo mixed with water, working outside the stain towards the centre to not spread staining. Blot with a clean wet cloth after every application.
Blood, Drinks, Wine, Ink, Colour Markers	Wipe up excess. Sponge with carpet shampoo mixed with water, working outside the stain towards the centre to not spread staining. Blot with a clean wet cloth after every application.
Burn/Scorch Mark	Use circular cutter to remove damaged section of panel, then re-glue a new piece into the cut-out.
Chewing Gum	Pick off with a knife/tool edge. Do not cut into panel. Freeze excess with ice cubes, then scrape away.
Dirt	Vaccum excess. Sponge with carpet shampoo mixed with water, working outside the stain towards the centre to not spread staining. Blot with a clean wet cloth after every application.

NSW Head Office

5 Liberty Rd,
Huntingwood,
NSW 2148

QLD

17 Moonbi Street
Brendale,
QLD 4500

VIC

U13, 69 Mark Anthony Dr,
Dandenong South
VIC 3175

WA

47 Abbott Road,
Perth Airport
WA 6105

NZ

49 Station Rd,
Papatoetoe, Auckland
NZ 2025