

wellcare

**3-IN-1 LED
BEAUTY MIRROR**



USER MANUAL

Model Number SY-W02243



Contents

03	General Safety Warnings
05	Getting Started
06	Product Overview
08	Operation
09	Helpful Tips
10	Specifications

General Safety Warnings

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury.

This product complies with Australian Safety standard AS/NZS 62368.1 & AS/NZS 60598 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

IMPORTANT

Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.

To prevent environmental factors (dampness, dust, food, liquid etc.) harming the product, only use it in a well-ventilated, clean and dry environment, away from excessive heat or moisture.

Keep the product away from direct sunlight or heat sources. In case of damage, do not disassemble, repair or modify the product yourself. Contact After Sales Support for advice on repair or replacement, or refer servicing to qualified personnel only.

Children should be supervised to ensure they do not play with the product.

Do not put any object on top of the product.

Do not place or store appliance where it can fall or be pulled into a bath or sink.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.

General Safety Warnings

Do not expose the product to microwaves.

Clean using a dry cloth only.

Do not use water or chemicals.

Keep the product away from oils, chemicals or any other organic liquids.

Use this appliance only for its intended purpose as described in this guide.

Responsible disposal of the packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

Responsible disposal of the product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.



CAUTION, RISK OF ELECTRIC SHOCK

Getting Started



Before first use

- Unpack the product and accessories and ensure all parts of the product are undamaged and in good working order. Keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the product when it is not in use. In the event that the packaging is to be disposed of, please recycle all packaging materials where possible.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- Do not use the product if any part is damaged or not working properly. In case of damage, contact our after sales support line for advice.
- Read this manual to familiarise yourself with the product. Pay particular attention to the safety instructions on the previous pages.

What's in the box:

- LED Mirror with Speaker and Wireless Charger
- 5x Magnifying Mirror
- USB-C Cable
- Instructional Manual
- Warranty Card



Product Overview

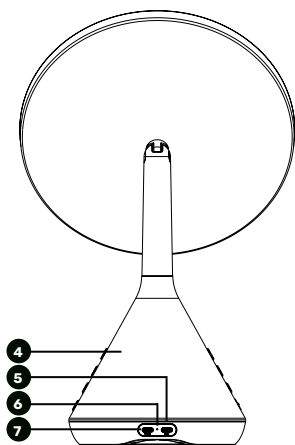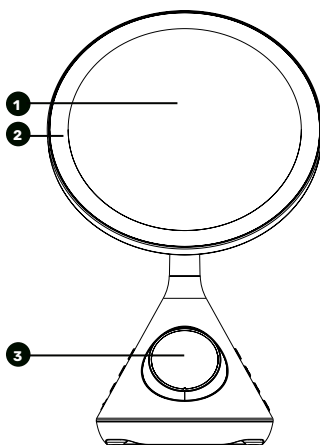

- 1 Make-up mirror
- 2 Ring Light
- 3 Magnetic charging area

- 4 Speaker
- 5 Type-C Input
- 6 Charging Indicator
- 7 Type-C Output

Product Overview

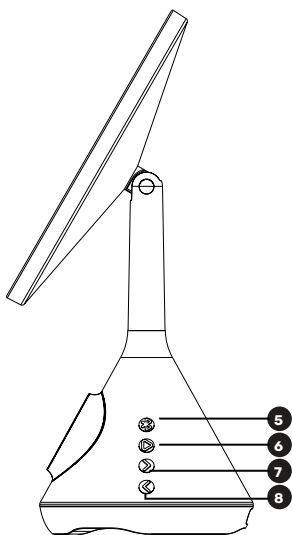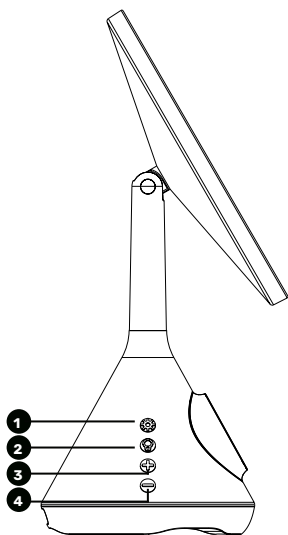

- 1 Lamp on/off Button
- 2 Switch Light Mode Button
- 3 + Brighter Light Button
- 4 - Lower Light (LED Light)
- 5 Bluetooth Pairing Button
- 6 Play/Pause Button
- 7 Volume Up Button
- 8 Volume Down Button

Operation

Power Connection

- 1 Plug the USB-C end of the charging cable into the adapter and the Type-C end into the product.
- 2 The indicator will blink twice, then it will turn off as the device enters standby mode.

Charging Indicator

- 1 Charging: Blue light on
- 2 Fully Charged: Blue light off (not supported by some phones)
- 3 FOD (Foreign Object Detection): Light flashes

Output Power (For Charging)

- 1 The magnetic wireless charging provides up to 15W of power.
- 2 The USB-C output delivers up to 5W.

Bluetooth Speaker

- 1 Press the Bluetooth Pairing Button to enter pairing mode. First-time pairing name: SY-W02243. A tone will play once connected.
- 2 Press Play/Pause Button to toggle the speaker to play or to pause
- 3 Press Volume Up Button to play the next track; hold to increase volume.
- 4 Press Volume Down Button to play the previous track; hold to decrease volume.

LED Lights Control

- 1 Press Lamp on/off Button to switch on or off the Make-up Lamp.
- 2 Press the Switch Light Mode Button to change three lightning effects (Warm Yellow, Cold White, Natural Light).
- 3 Press the + Brighter Light Button or the - Lower Light Button to adjust the brightness level of the light (Low Light, Medium Light, High Light).

IMPORTANT: If you need Bluetooth, the wireless charger, and the makeup lamp to operate simultaneously, please use a PD30W or higher power adapter. When using a 5V power supply, the wireless charger only supports a 5W output and the makeup lamp function.

Helpful Tips

IMPORTANT: Please use a power supplier higher than 9V = 4A

- 1 Do not squeeze, drop, or collide the product.
- 2 Do not disassemble or expose it to fire or water to avoid short circuits or leakage.
- 3 Do not use the wireless charger in extremely hot, humid, or corrosive environments.
- 4 Keep it away from magnetic cards (ID cards, bank cards, etc.) to prevent card damage.
- 5 Maintain a distance of at least 20 cm between the charger and implanted medical devices (pacemakers, cochlear implants, etc.).
- 6 Keep the product out of reach of children to prevent accidental misuse.
- 7 Keep the charger and connected devices away from water and other liquids.
- 8 Disconnect the power supply before cleaning the charger.

Specifications

Input	USB-C 9V $\approx$ 4A/ 12V $\approx$ 3A
LED Light	3W (Max)
Output	USB-C: 5V $\approx$ 1A(5W Max) Magnetic Wireless Charger: 15W Total Wireless Output: 15W
Ambient Temperature	Ta: 25°C

For Technical and Warranty Support

1300 886 649

tempo.org/support

Distributed by Tempo (Aust) Pty Ltd,
PO BOX 6097, North Sydney NSW 2059

Notes

wellcare



Please read the manual

It will help you get the best out of your product

Still have questions?

Call After Sales Support
1300 886 649
Or visit tempo.org/support



Please scan the QR code to access the latest manual.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on (AU) 1300 886 649 or (NZ) 0800 836 761 for advice.

Distributed by Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO BOX 6097, North Sydney NSW 2059

Customer Helpline:

(AU) 1300 886 649 (NZ) 0800 836 761

Email: tempo.org/support

www.wellcarehealthproducts.com